

Eclipse

The Difference Is Like Night And Day



GO WHERE LIFE TAKES YOU

THE ECLIPSE DIFFERENCE

Wherever you go...Eclipse makes travel safe and comfortable for everyone.



Shown with standard carpeted flooring

Eclipse offers you access to a whole new world of freedom. Our team of engineers has made every effort to maximize interior space. We listen to our customer's suggestions and incorporate design details that provide easy access, in and out of the van. Our products are tested for rigorous endurance and durability to ensure that your investment provides years of reliable use.

All Eclipse vehicles are designed to be versatile...practical... functional and affordable.



BUILT TO USE BUILT TO LAST

- Stainless Steel corrosion resistant frame and floor construction
- Moisture resistant sound barrier subfloor
- Protective fuel tank safety barrier system
- Easy to clean, 100% nylon automotive grade carpet. Odor, stain and mildew resistant
- Carpeted mats on removable quick release roll-out seat bases
- Multiple wheel chair tie down tracks
- ABS molded interior panels for sleek automotive looks
- Auto Kneeling System (optional) at the touch of a button, the sliding door opens, the system lowers the floor within inches of ground level, and the ramp extends for easy access in or out of the passenger area
- Commercial, ADA and personal use models available
- 3 year/36,000 mile limited warranty



Clear most steep driveways, speed bumps and automatic car washes with ease. Eclipse lowers the floor 10" for easy access and increased visibility, while maintaining 6" of ground clearance.



Drive or ride? You choose. This versatile, removable passenger's seat gives you the flexibility to ride where you want. To drive from your chair, roll-away the optional removable driver's seat. Seating packages are available in cloth or leather.



Entertainment packages are available with LCD flat panel TV/DVD player combo, game prep systems, and wireless headphones.

When it comes to maneuverability and leg room every inch counts. Eclipse floor width measures 60-1/4" at the driver and passenger seating area.



Shown with optional anti-skid flooring and 56" ADA door opening

56" ADA dual seal door opening is available in commercial and personal use vehicles.



The Eclipse engineering team developed a state of the art kneeling system that is designed for all climates and conditions. Whether it's snow or the salt air, our fully internal kneeling system is protected from the elements. Our fully automatic power door, power ramp and kneeling system operates at the touch of a button from the standard factory remote or from the multiple conveniently located interior switches.



Eclipse is known for outstanding "fit and finish", with recognition from Original Equipment Manufacturers, as a Quality Excellence Award winning upfitter, year after year.

THE DIFFERENCE IS LIKE NIGHT AND DAY

With stainless steel floor and frame construction Eclipse vans are "Built to Use and Built to Last."



Our manual ramp operates with reduced effort and features a durable powder coated aluminum non-skid surface.



Eclipse offers enhanced safety for ambulatory passengers. You can enter or exit the curb side passenger area with the optional swing-away ramp.

A - Overall Height of Van 71"	F - Width (Middle Area) 65"
B - Door Height 53-1/2"	G - Width (Front Area) 60-1/4"
ADA Door Height 56"	H - Lowered Floor Length 82-1/2"
C - Interior Height (Center) 58-3/4"	I - Ramp Length 54"
D - Interior Height (Front) 57-1/2"	J - Ramp Width (Usable) 29-1/4"
E - Ground Clearance (Frame) 6-1/4"	Optional Ramp Width (Usable) . . . 30"

Dimensions are for reference only. Please see your Eclipse Mobility Dealer for complete model information.

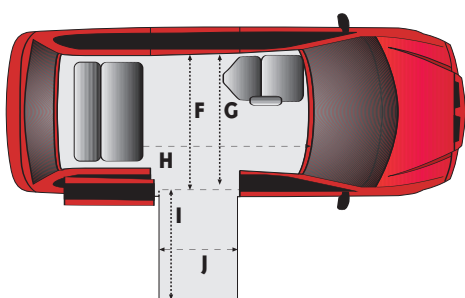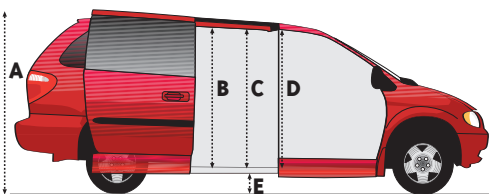

2901 Dexter Drive ■ Elkhart, IN 46514
Toll Free: 800-501-1223 ■ Phone: (574) 262-1223 ■ Fax: (574) 262-5080
Visit our web site at www.eclipsemobility.com

©2005. Due to ongoing product development, Eclipse reserves the right to make changes in standard equipment, options and pricing without notice or obligation.



"When your vehicle is your freedom, you can rely on Eclipse for Safety, Quality and Dependability."

Terry J. Hiser
 President
 Eclipse Mobility

Call (800) 501-1223 today for the Eclipse Mobility Dealer nearest you.